 
 
 


## 1 Signal setting



After installing the speed signal converter, Please change the relative setting as suggestion.

- The tire circumference : 714
- Sensor point : 6

## 2 Speed signal converter



## 3 Wiring installation instructions

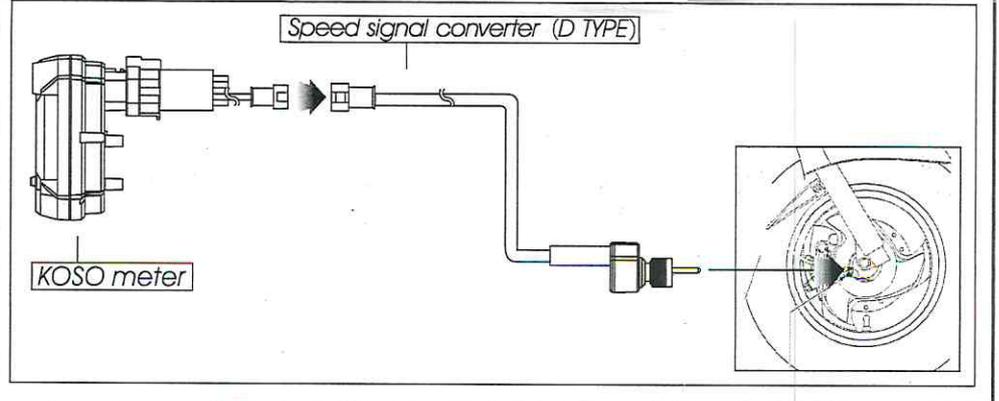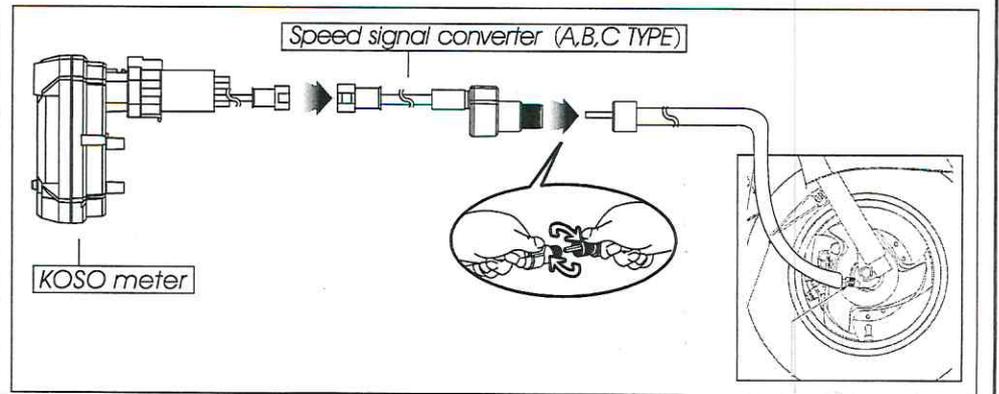


## 1 Signal setting

After installing the speed signal converter, Please change the relative setting as suggestion.

- The tire circumference : 714
- Sensor point : 6

## 2 Speed signal converter

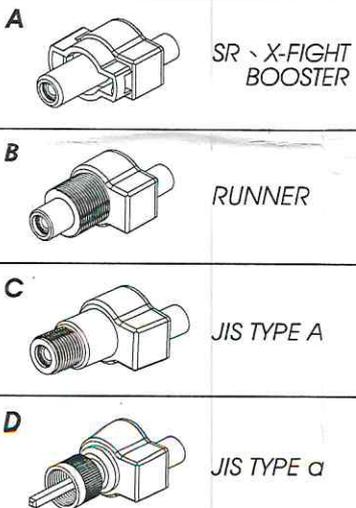

## 3 Wiring installation instructions

